


The Sure-Fit™ Process for Surgeons

An interactive approach to making custom milled abutments



Full contour wax-up with margin line set in black

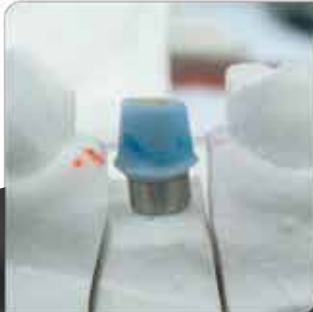

Final custom abutment wax-up (Soft tissue is used in production)



Final custom abutment



Sure-Fit™ Jig for easy placement



Intrigue custom temporary



NobelProcera P3™ zirconia coping

1

Surgeon takes implant level impression.

2

Wax-up to full contour.

3

Receive Doctor feedback on full contour & cutback wax to shape of custom abutment.

4

Approve abutment design and proceed with production.

5

Doctor places custom abutment with the "Sure-Fit™ Jig" and places the temp.

6

Doctor sends coping to the GP where conventional impression is taken.

7

GP sends coping & impression to the lab for porcelain build-up, creating a Sure-Fit™ Crown!

Increase your GP referral business!

ProCereX now has the ability to fabricate custom milled abutments on the following platforms...



Call **602.298.1388**
www.ProCereX.com

